


HOME DECORATORS COLLECTION

BF-20370 OXFORD COLLECTION 5-SHELF BOOKCASE 36"W

INV#28774








ASSEMBLY INSTRUCTIONS




Made In China

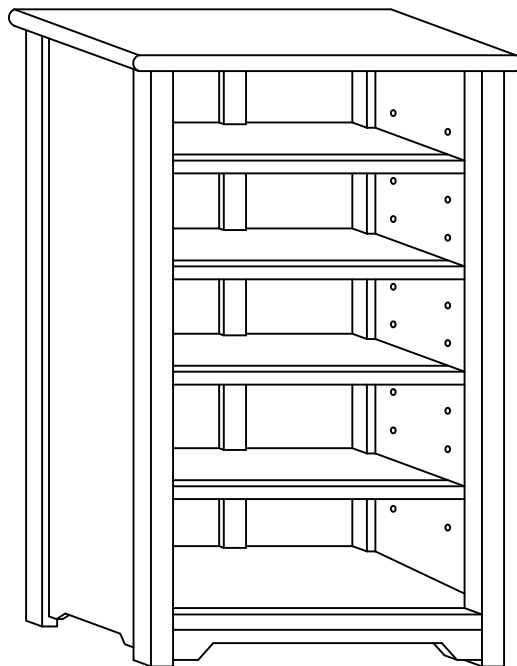

Thank you purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware and then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.



IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

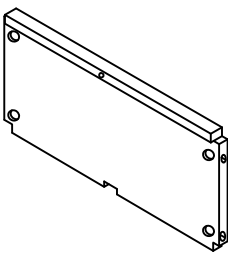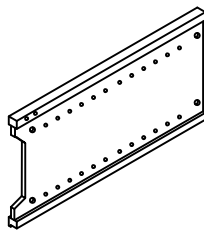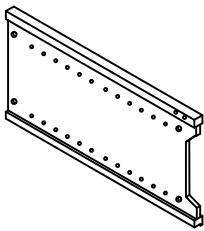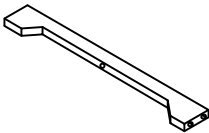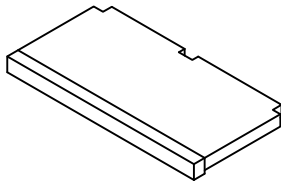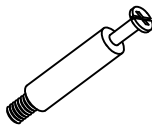PARTS LIST		
A  TOP PANEL-1PC	B  BOTTOM PANEL-1PC	C  LEFT SIDE PANEL-1PC
D  RIGHT SIDE PANEL-1PC	E  LOW PANEL-1PC	F  SHELVES-4PCS
G  SHELF SUPPORTS-16PCS	H  CAM-LOCKS-8PCS	I  CAM-BOLTS-8PCS
J  DOWELS-4PCS	K 6mm × 1/2"  SCREWS-30PCS	L  CAM-TOOL-1PC

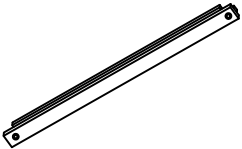M  LEFT BACK PANEL-1PC	N  RIGHT BACK PANEL-1PC	O  REAR PANEL GUIDE-1PC
P 6mm × 3/4"  SCSREWS-2PCS	Q 8mm × 1"  SCREWS-1PC	W1 prevent fall down  HOOKS-2PCS
X1 prevent fall down 6mm × 3/4"  SCREWS-2PCS	Y1 prevent fall down  GECKOS-2PCS	Z1 prevent fall down 7mm × 7/8"  SCREWS-2PCS




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

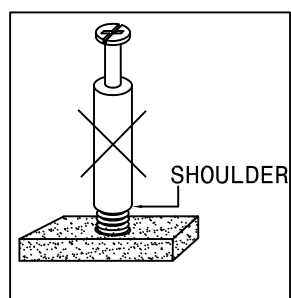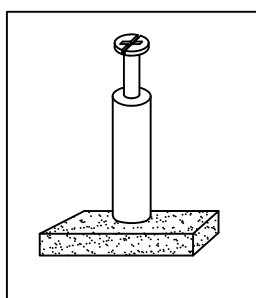


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

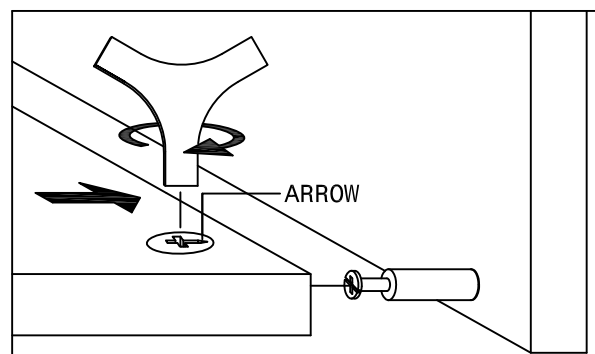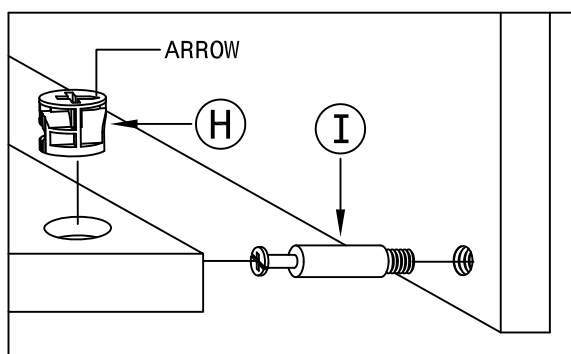


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

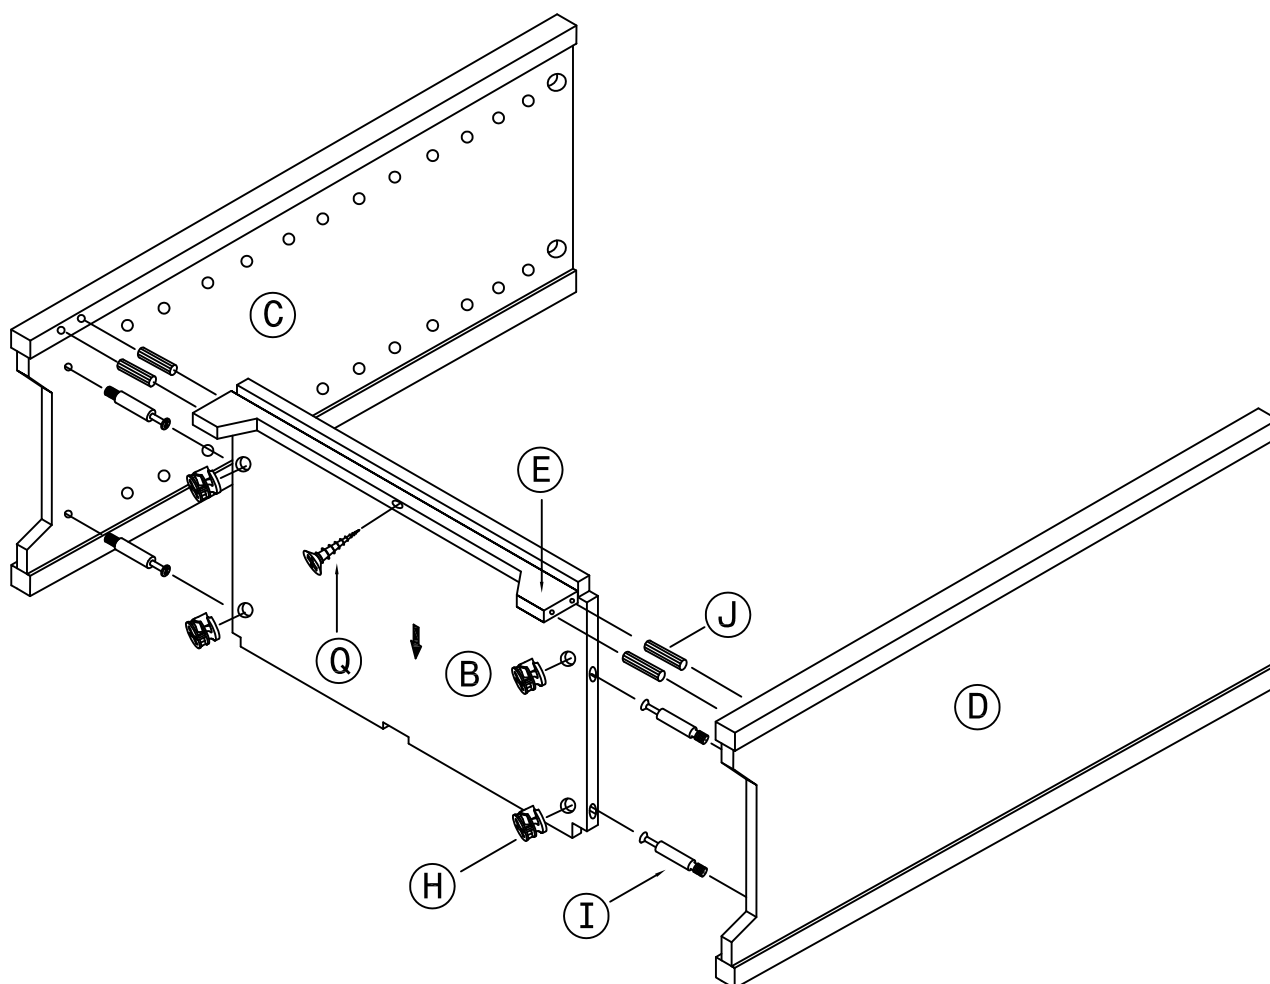


1) .ASSEMBLE THE SIDE PANEL(C/D) .

- ATTACH THE LOW PANEL(E) TO BOTTOM PANEL(B) USING 1 SCREW(Q) .
- INSERT THE 4 DOWELS(J) INTO THE HOLE IN THE LOW PANEL(E) .
- ROTATE THE 4 CAM-BOLTS(I) INTO THE HOLES IN THE SIDE PANEL(C/D) .
- PLACE CAM-BOLTS(I) INTO THE HOLES IN THE BOTTOM PANEL(B) AND ATTACH USING 4 CAM-LOCKS(H) .

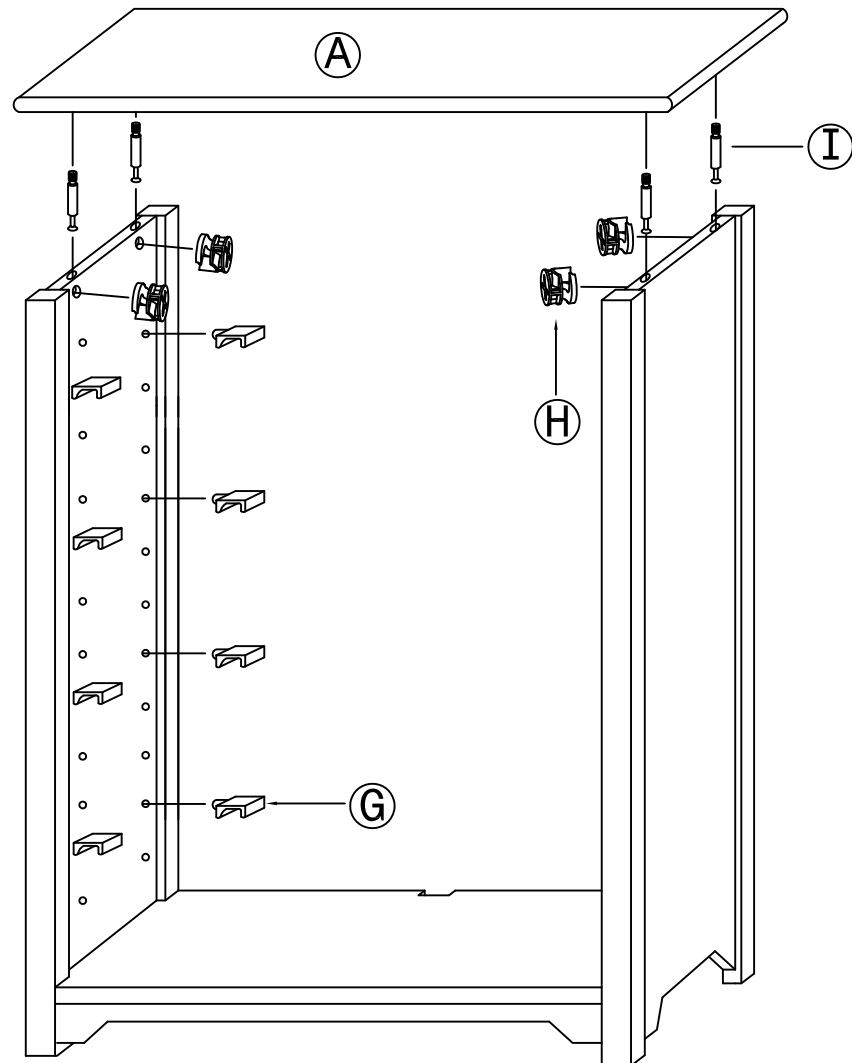


2) .ASSEMBLE THE TOP PANEL (A) .

- INSERT THE 16 SHELF SUPPORTS(G) INTO THE HOLES IN THE SIDE PANEL(C/D) .
- ROTATE THE 4 CAM-BOLTS(I) INTO THE HOLES IN THE TOP PANEL(A) .
- PLACE CAM-BOLTS(I) INTO THE HOLES IN THE SIDE PANEL(C/D) AND ATTACH USING 4 CAM-LOCKS(H) .

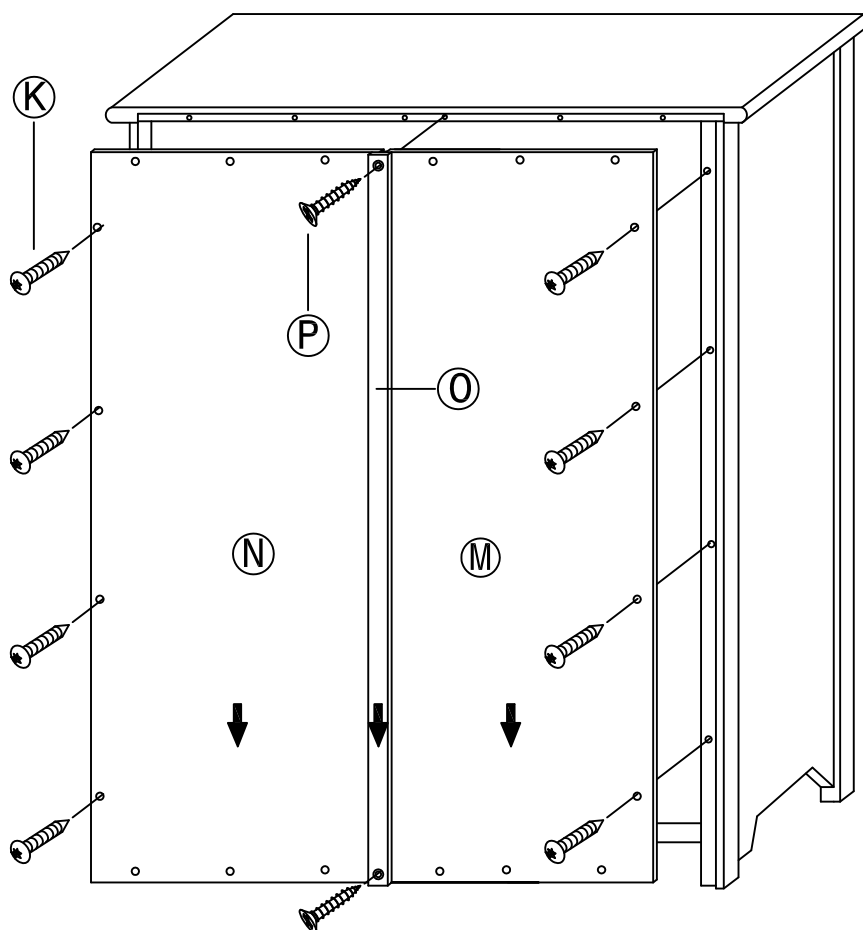

3) .ASSEMBLE THE BACK PANEL (N/M) .


- INSERT THE BACK PANEL (N/M) INTO THE SLOT IN THE REAR PANEL GUIDE (O) .
- ATTACH THE BACK PANEL (N/M) AND REAR PANEL GUIDE (O) USING SCREWS (K/P) .

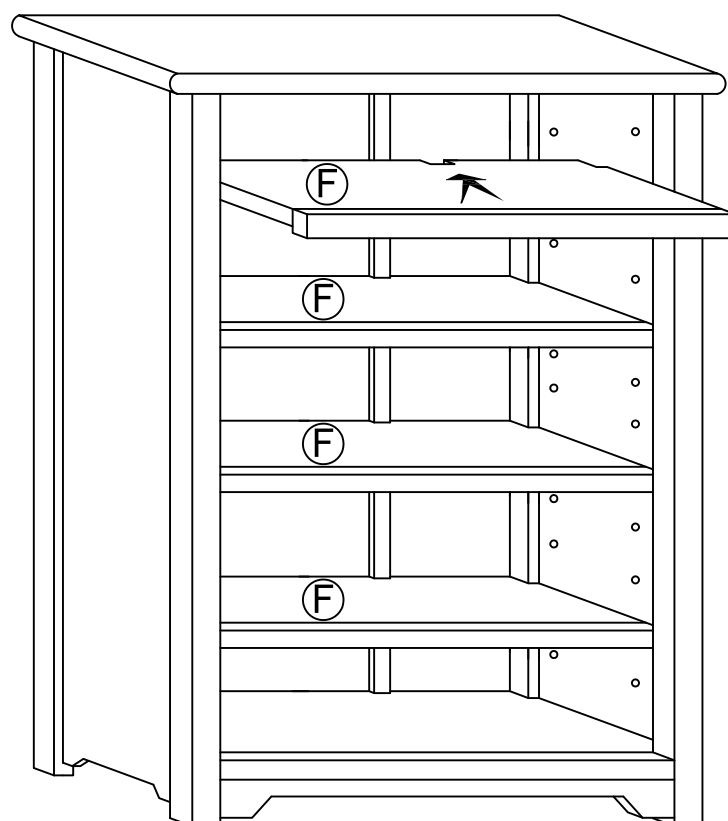

4) .ASSEMBLE THE SHELVES(F) .

- PUT THE 4 SHELVES(F) ONTO THE SHELF SUPPORTS(G) .

- I** ● ATTACH 2 HOOKS(W1) USING 2 SCREWS(X1) IN THE
PREDRILLED HOLES OF REAR TOP PANEL.

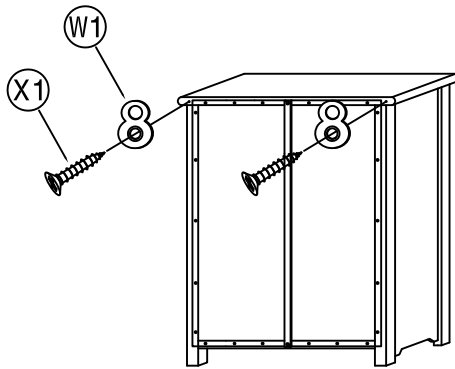

- II** ● DRILL TWO HOLES INTO WALL, PLEASE REFER TO TOP PANEL'S HOLES DISTANCE AND HEIGHT.
● PUT 2 GECKOS(Y1) INTO HOLES IN WALL AND ROTATE 2 SCREWS(Z1) INTO GECKOS(Y1).

